

GAME BOY ADVANCE

Color Reference Chart



Arctic
PN 45269



Indigo
PN 45265




Glacier
PN 45267




Fuchsia
PN 45271

Game Boy® Advance AC Adapter

Front

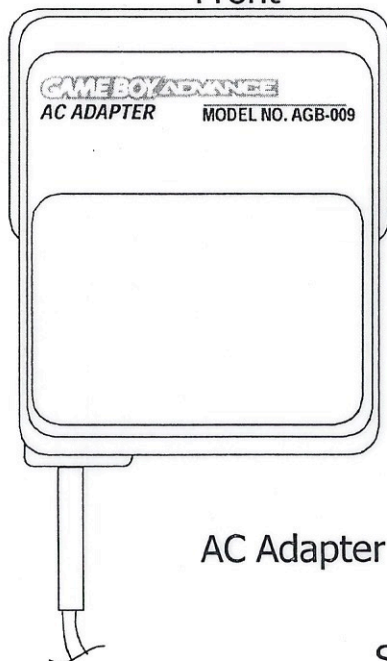


Back

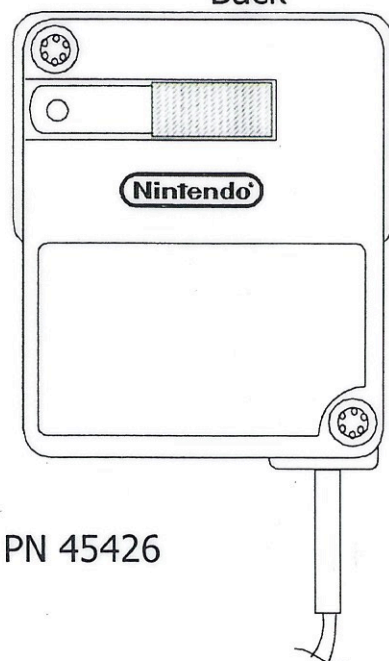


AC Adapter Only PN 45426

Side

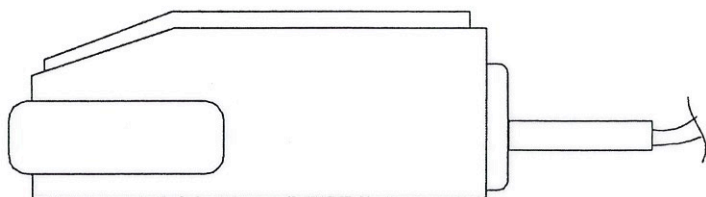


Game Boy® Advance Power Connect Unit

Cover

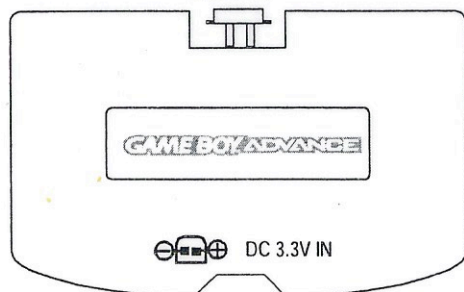

Inside

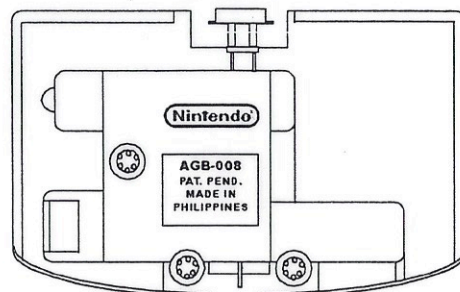

Power Connect Unit Only PN 45427

Attention: Both the AC Adapter and Power Connect Unit are required to power the Game Boy Advance when the consumer is not using batteries. They are sold as a set at retail, but as a service to the consumer, you may order the parts individually to replace non-functioning parts.

To use the AC Adapter and Power Connect Unit, remove the Game Boy Advance's battery cover and batteries. Snap the Power Connect Unit into the battery compartment, plug the AC Adapter into the Power Connect Unit, and then into a wall outlet. Once everything is set up, the Game Boy Advance may be powered on normally.

Please Note: The AC Adapter "prongs" can fold into the AC Adapter (as shown in the line drawings on the left), and must be folded out (as shown in the photo below) to be plugged into the wall.



Complete Set PN 45425